


# USER GUIDE

## GETTING STARTED

First, hold the M button down on the left handlebar to turn the bike on. Now, your Wing Bike is ready to ride. To turn off, press and hold the button M down again.

Start pedaling to initiate the motor and off you go. When you push against the pedal the motor will engage.

Press the "UP" and "DOWN" to increase or decrease the amount of pedal assist.

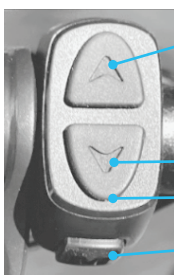

'UP' button

'Down' button

'M' button

The motor stops when you:  
1) stop pedaling, or 2) squeeze the right (rear) brake lever.

Simply start pedaling again to re-engage the motor.  
possible.

## LIGHT AND ALARMS

To turn the light on/off hold the "UP" button.

To activate the alarm, press the top button on the alarm fob. The alarm will now sound if the bike is disturbed.

To silence/deactivate the alarm, press the bottom button. The middle button is used to test the alarm.

## BATTERY AND CHARGING

Press the button on the battery to show remaining charge in thirds; from Blue to Green to Red. The Battery can be charged on or off the bike.

To charge the battery, plug the charger into the charging port on the battery, then connect the charge to a wall outlet.

The charger's LED indicator will be Red when charging and green when fully charged.

